

### How to solve DSL blinking issue on ADSL routers?

#### Solution:

Kindly do the following steps:-

1. Open the configuration page by typing 192.168.1.1 in the address bar of the internet explorer and press enter. Type admin as the username and password.

Click on Network >> WAN >> ADSL settings.

1. Keep the option "G.dmt enabled" checked and uncheck the rest.
2. Click on apply.
3. Reboot the router and check if the DSL gets stable
4. If Link is still blinking then continue with the steps below:

Click on Network >> WAN >> ADSL settings.

1. Keep the option "G.lite enabled" checked and uncheck the rest.
2. Click on apply.
3. If Link is stable > Check internet LED to be Green
4. If Link is still blinking, try to by-pass the ADSL splitter
5. If link is still blinking, get the line tested from your ISP with a test modem