

How to check product hardware and firmware version?

Solution:

1. Hardware version will be mentioned on the sticker under the device or on the box of the device
2. To check the current firmware version, open the device web-based configuration page
3. Check for device Info/ Status
4. Note the Built date or software version mentioned