

How to change of LAN IP address?**Solution:**

1. Open the configuration page of the device by typing the default IP (default IP and login credentials will be found on the device label) in a web browser and enter the username and password as mentioned on the label of the device
2. Click on Network > LAN
3. Change the IP Address as per your network requirements and Apply Changes