

How to configure Digisol device in Repeater mode?

Solution:

1. Assign IP address on the LAN card in the range of the router in case the DHCP is disabled
2. It is required that there is an active DHCP server in the network as DHCP server gets disabled or needs to be disabled in Repeater mode
3. Set the mode to repeater
4. Scan for the wireless network of the available router / access point whose signals are to be repeated
5. Connect to the available network, note down the channel number and the encryption on the main router
6. Configure the same channel number and encryption settings on the repeater
7. Change the IP address of the Repeater in the range of the main router
8. Disable DHCP server on the repeater
9. Reboot both the devices and place the repeater where you will get a minimum of 50% signal strength from that main router.