



Quick Installation Guide

150Mbps Wireless Broadband Home Router

DG-HR1400



Copyright:

Copyright © 2016 by Digisol Systems Ltd. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

Trademarks:

DIGISOL™ is a trademark of Digisol Systems Ltd. All other trademarks are the property of the respective manufacturers.

Package Contents

The following items should be present in your package:

- DG-HR1400 Wireless Broadband Home Router
- Power adapter (5V DC, 1 A)
- Rubber Feet (4 Nos.)
- Quick Installation Guide
- Installation Guide CD (includes User Manual, QIG & Utility)
- Patch chord (1 No.)

Make sure that the package contains above items. If any of the listed items is damaged or missing, please contact your retailer immediately.

Product Overview

Thank you for purchasing DG-HR1400 150Mbps 802.11n Wireless Broadband Home Router! DG-HR1400 is the best choice for Small office / Home office users, all computers and network devices can share a single xDSL / cable modem internet connection at high speed. Easy install procedures allow computer users to setup a network environment in very short time - within minutes, even inexperienced users. When the number of your computers and network-enabled devices grow, you can also expand the number of network slots by simply connecting a hub or switch, to extend the scope of your network.

All computers and IEEE 802.11b/g/n wireless-enabled network devices (including PDA, cellular phone, game console and more) can connect to this wireless router without additional cabling. With a compatible wireless card installed in your PC, you can transfer files up to 150Mbps (transfer data rate).

Product Features

- High Internet Access throughput.
- Wireless speed up to 150Mbps.
- Allows multiple users to share a single Internet line.
- Shares a single Cable or xDSL internet connection.
- Access private LAN servers from the internet.
- Four wired LAN ports (10/100M) and one WAN port (10/100M).
- Works with IEEE 802.11b/g/n wireless LAN devices.
- Supports DHCP (Server/Client) for easy IP-address setup.
- Supports multiple wireless modes like: AP, Client, Wireless Bridge and Universal Repeater.

- Advanced network and security features like: Special Applications, QoS, DMZ, Virtual Servers, Access Control, Firewall.
- Allows you to monitor the router's status like: DHCP Client Log, System Log, Security Log and Device/Connection Status.
- Easy to use Web-based GUI for network configuration and management purposes.
- Remote management function allows configuration and upgrades from a remote computer (over the Internet).
- Provides Auto MDI / MDI-X function for all wired Ethernet ports.

System Requirements

The following system requirements are recommended

- Notebook or desktop computer with network adapter (wired/wireless)
- Internet connection, provided by xDSL or cable modem with a RJ-45 Ethernet port.
- Windows 98/ME/2000/XP/Vista
- Web browser (Microsoft Internet Explorer 4.0 or above, Netscape Navigator 4.7 or above, Opera web browser or Safari web browser).
- An available AC power socket (100 – 240V, 50/60Hz)


Front View



LED Name	LED Status	Indication
Power (PWR)	On	Router is switched on and correctly powered.
WAN	On	WAN port is connected.
	Off	WAN port is not connected.
	Blinking	WAN activity (transferring or receiving data).
LAN(1-4)	On	LAN port is connected.
	Off	LAN port is not connected.
	Blinking	LAN activity (transferring or receiving data).
WLAN	On	Wireless network is switched on.
	Off	Wireless network is switched off.
	Blinking	Wireless LAN activity (transferring or receiving data).
WPS	On	A wireless device has been successfully added to the network by WPS function.
	Off	WPS process is not initiated.
	Blinking	A wireless device is connecting to the network by WPS function.

Rear View

Below shown is the product Rear View.

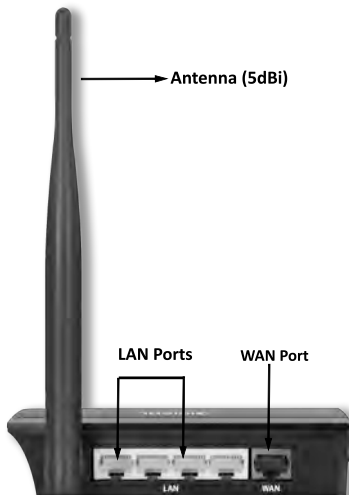

Interfaces	Description
Antenna	This antenna is a 5dBi dipole antenna.
LAN (1 - 4)	Local Area Network (LAN) ports 1 to 4.
WAN	Wide Area Network (WAN / Internet) port.

Side View

Below shown is the product Side View.



Interfaces	Description
Power Connector	The Power socket is where you will connect the power adapter. Please use the power adapter provided with this Wireless Router.
Power on/off button	Press this button to power ON/OFF the router.
Reset	Reset the router to factory default settings (clear all settings). Press this button and hold for 5 seconds to restore all settings to factory defaults.
WPS/WIFI	The WPS/WIFI button has two functions. WPS: Press this button for more than 10 seconds to initiate WPS. WIFI: Press this button for less than 5 seconds to enable WLAN.

Hardware Installation

Please follow the below mentioned instructions to build the network connection between your new WIRELESS router and your computers, network devices:

- 1 Connect your xDSL / cable modem to the WAN port of the router by an Ethernet cable.



- 2 Connect all your computers, network devices (switch / hub) to the LAN port of the router.




- 3** Connect the power adapter (5V DC / 1A) to the wall socket, and then connect it to the 'Power' socket of the router.



- 4** Please check all LEDs on the front panel. Power LED 'PWR' should be steadily ON, WAN and LAN LEDs should be ON. Check if the computer/network device connected to the respective port of the router is powered ON and correctly connected. If power LED 'PWR' is not ON, or any LED you expected is not ON, please recheck the cabling.

Software Installation

- 1 Insert the Setup CD into your CD-ROM drive of notebook/desktop computer.

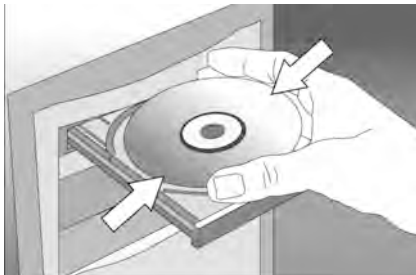


- 2 Explore the CD and execute the "AutoRun.exe" file. Below given screen will appear. Click '**Start**' to Continue.



- 3 Connect one end of a network cable to the WAN port of the router and the other end to the DSL/Cable modem. Click 'Next' to continue.



- 4 Connect one end of the provided network cable to one of the LAN ports (1~4) of the router and the other end to your computer. Click 'Next' to continue with the installation.

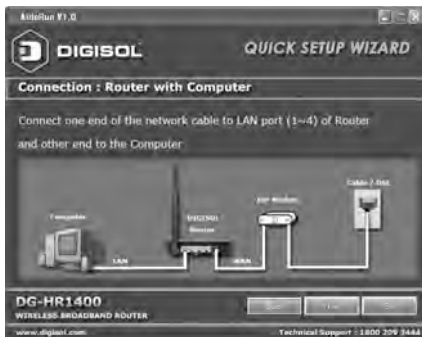


- 5 Power on the Router. It will take approximately 30 seconds for the router to boot up completely. Click 'Next' to continue with the installation.



- 6 Ensure the normal indication of all LED's on the router. If not, try the above steps again else click 'Next' to continue.



- 7 Enter the Router's password to log in to the Router. The default password is "1234". It is recommended to change the router's password to protect it from being accessed by other users. If you do not wish to change the current password, you can leave "New Password" and "Confirm New Password" fields blank. Click 'Log in' to continue.

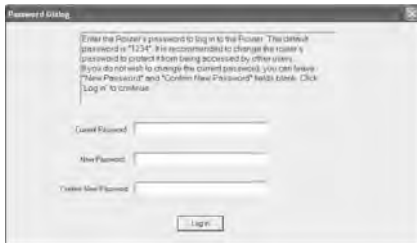

The image shows a web browser window titled "Password Login". Inside, there is a text box with instructions: "Enter the Router's password to log in to the Router. The default password is '1234'. It is recommended to change the router's password to protect it from being accessed by other users. If you do not wish to change the current password, you can leave 'New Password' and 'Confirm New Password' fields blank. Click 'Log in' to continue." Below the text box are three input fields: "Current Password", "New Password", and "Confirm New Password". At the bottom right is a "Log in" button.

- 8 Please select the internet connection type. Click 'Next' to continue.



The image shows a web browser window titled "Digisol V1.0" and "QUICK SETUP WIZARD". The main heading is "Configure : WAN Interface". Below it, the text says "Please select the Internet connection type". There is a large box labeled "WAN Mode" on the left and a smaller box on the right containing three radio button options: "PPPoE" (selected), "DHCP", and "Static IP". At the bottom, it says "DG-HR1400 WIRELESS BROADBAND ROUTER" and "www.digisol.com". There are "Back", "Next", and "Cancel" buttons. At the very bottom, it says "Technical Support : 1800 309 3444".

NOTE: The steps mentioned till here are the common steps to be followed for all the three modes. Following steps below describe how to configure the respective modes.

PPPoE/DSL Users

- 9 Choose PPPoE. (Point to Point Protocol over Ethernet) If your ISP uses a PPPoE connection you will be provided with a username and password. This option is typically used for DSL services.

The screenshot shows the 'Configure : PPPoE' screen of the Digisol Quick Setup Wizard. The window title is 'AutoRun V1.0'. The Digisol logo is in the top left, and 'QUICK SETUP WIZARD' is in the top right. Below the title bar, it says 'Configure : PPPoE'. The main text reads: 'Please enter the Username and Password provided by the ISP'. There are two input fields: 'Username :' with the value 'PPPoE_User' and 'Password :' with the value 'PPPoE_Password'. At the bottom, it says 'DG-HR1400 WIRELESS BROADBAND ROUTER', 'www.digisol.com', and 'Technical Support : 1800 209 3444'. There are three buttons at the bottom right: 'Back', 'Next', and 'Finish'.

- 10 Once the user name and password is entered click on 'Next', the screen shown below will appear. Click on 'Next'.

The screenshot shows the 'Running Status' screen of the Digisol Quick Setup Wizard. The window title is 'AutoRun V1.0'. The Digisol logo is in the top left, and 'QUICK SETUP WIZARD' is in the top right. Below the title bar, it says 'Running Status'. There is a progress bar. The main text reads: 'If you get an error message then click "Back" to reconfigure the settings, else click "Finish" to complete the configuration. Click "Next" to config Wireless.' There are five input fields: 'WAN Link Type' (value: 'PPPoE'), 'WAN IP', 'Default Gateway', 'Primary DNS', and 'Secondary DNS'. At the bottom, it says 'DG-HR1400 WIRELESS BROADBAND ROUTER', 'www.digisol.com', and 'Technical Support : 1800 209 3444'. There are three buttons at the bottom right: 'Back', 'Next', and 'Finish'.


- 11 Enter the 'SSID' and click on 'Next'.




- 12 Configure the wireless security. Enter the security mode i.e. either 'None' or 'WPA2 Mixed' and click on 'Next'.



- 13 The screen as shown below will appear. Click on 'Finish'.

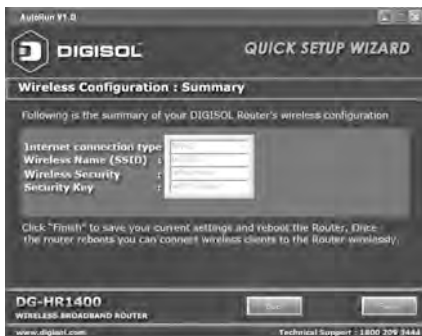

- 14 Lastly, the router will reboot as shown below.

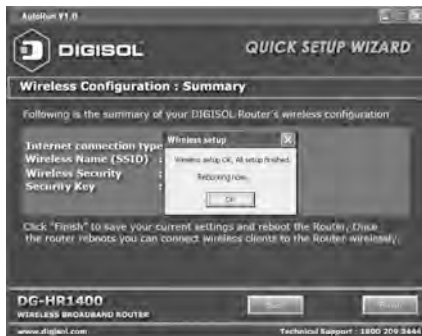

DHCP (Cable Modem Users)

- 15 Select DHCP Client to obtain IP Address information automatically from your ISP. Click on 'Next'.



- 16 The screen shown below will appear. Click on 'Next'.



- 17 Below mentioned screen will appear. Click on 'Next'.

The screenshot shows the 'Running Status' screen of the Digisol Quick Setup Wizard. At the top, it says 'Autoboot V1.0' and 'DIGISOL QUICK SETUP WIZARD'. Below the title bar, there's a 'Running Status' section with a progress bar. A message states: 'If you get an error message then click "Back" to reconfigure the settings. Else click "Finish" to complete the configuration. Click "Next" to config Wireless.' Below this is a table of configuration options:

WAN Link Type	DHCP
WAN IP	Auto
Default Gateway	Auto
Primary DNS	Auto
Secondary DNS	Auto

At the bottom, it identifies the device as 'DG-HR1400 WIRELESS BROADBAND ROUTER' and provides the website 'www.digisol.com' and technical support number '1800 209 3444'. Navigation buttons for 'Back', 'Next', and 'Finish' are visible.


- 18 Enter the 'SSID' and click on 'Next'.

The screenshot shows the 'Wireless Configuration' screen of the Digisol Quick Setup Wizard. It prompts the user to 'Configure a name (SSID) for your wireless network , so that you can identify your wireless network. The default SSID is "DIGISOL"'. Below this is a text input field labeled 'Wireless Name (SSID) :' with the value 'DIGISOL' entered. An example is provided: 'Example : [Mynetwork , Wifi123 etc..]'. At the bottom, it identifies the device as 'DG-HR1400 WIRELESS BROADBAND ROUTER' and provides the website 'www.digisol.com' and technical support number '1800 209 3444'. Navigation buttons for 'Back' and 'Next' are visible.


- 19 Configure the wireless security. Enter the security mode i.e. either 'None' or 'WPA2 Mixed' and click on 'Next'.



- 20 Following screen will appear. Click on 'Finish'.

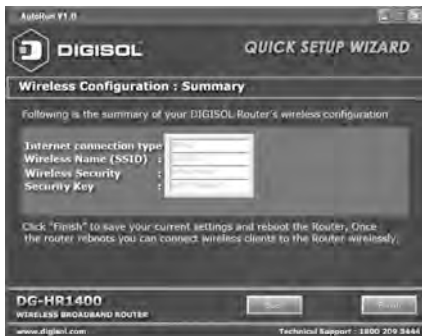

- 21 Lastly, the router will reboot as shown below.

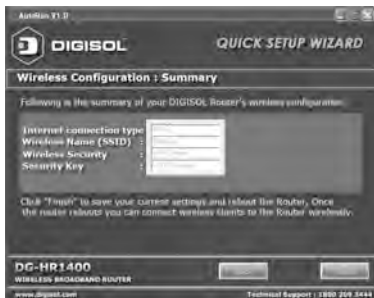

Static IP (Cable Modem Users)


- 22 Select Static IP Address if all the Internet port's IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address and DNS address provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format. Click on 'Next'.



- 23 The screen shown below will appear. Click on 'Next'.




- 24 Enter the 'SSID' and click on 'Next'.

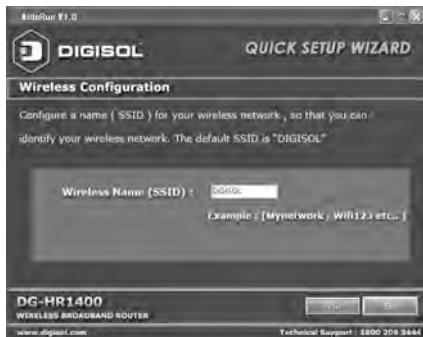

- 25 Configure the wireless security. Enter the security mode i.e. either 'None' or 'WPA2 Mixed' and click on 'Next'.



- 26 You can view the information about the wireless configuration in the next screen. Click 'Finish' to save your current settings and reboot the router.

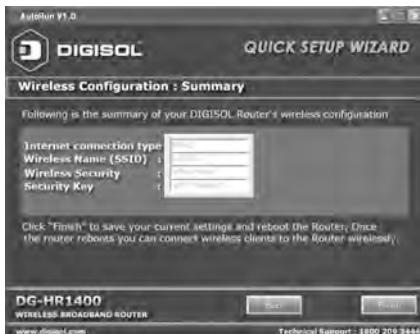

Web Management

Connecting the router's management interface by web browser:
After you assign an IP address to the computer, open the web browser, and type the IP address of the router in the address bar as 'http://192.168.2.1'. The following message will be shown:



Please input user name and password in the field respectively, default user name is 'admin', and default password is '1234', then press 'Login' button, and you can see the web management interface of this router:



FAQ

Following are the solutions to problems that may occur during the installation and operation of the Digisol DG-HR1400 Router.

1. Router cannot get connected to internet.

- Access the router's web configuration and go to 'status'->'Internet Connection' menu and verify internet connection status.
- If you were previously able to connect a computer to internet directly, try to do that again, and verify whether you can access internet with your computer directly attached to the device provided by your internet service provider.
- Check PPPoE user ID and password again.
- Call your internet service provider and verify whether there is some issue with their service.
- Try to reboot the router and verify whether it connects to internet or not.
- Try to use IP address instead of hostname. If you can use IP address to communicate with a remote server, but cannot use hostname, please check DNS settings.

2. Wireless client cannot locate the router.

- Verify whether 'Broadcast ESSID' is set to off in router's web configuration.
- Verify whether the antenna is properly connected and in correct direction.
- Is your wireless client far away from your router? Try to get closer to the router.
- Ensure that you input ESSID on your wireless client manually, if ESSID broadcast is disabled.



Limited Lifetime Warranty

This Product is covered under DIGICARE Limited Lifetime Warranty program backed by DIGICARE Service Center. To avail this Limited Lifetime Warranty offer, customer needs to contact DIGICARE's Technical Assistance Center for the same. You may be asked to provide proof of purchase of product for warranty claim of defective product. Please refer website www.digisol.com for the detailed support terms & conditions and support process.

Warranty Policy

1. **Hardware Warranty :** Hardware warranty period shall be limited up to Three years. External Power Adapter shall carry One year warranty only against manufacturing defects. Any repair or replacement will be rendered by DIGICARE at its Service Center only.
2. **Software Warranty :** Digisol issues this Limited Software Warranty that the software portion of the product ("Software") will substantially conform to Digisol then current functional specifications for the software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of one year ("Software Warranty period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation.
3. **Governing Law :** This warranty shall be governed by Indian Laws.
4. **Limited Lifetime Warranty** shall subject to the terms & conditions specified in the DIGISOL PRODUCT WARRANTY policy displayed on www.digisol.com



📧 helpdesk@digisol.com

☎ 1800 209 3444





DIGISOL SYSTEMS LIMITED

Smartlink House, Plot. No. 5,
Off CST Road, Bandra-Kurla Complex Road,
Santacruz (East), Mumbai - 400 098, India.

Tel: +91 22 3061 6666 / 2652 6696,

Fax: +91 22 2652 8914

Digisol is a Subsidiary of Smartlink Network Systems Ltd.

www.digisol.com

DIGICARE
Service with Delight™



1800 209 3444



helpdesk@digisol.com
sales@digisol.com