

Q : How to Configure as a Switch in DG-HR1400**A :** Setup:

DG-BG1000 (192.168.1.1)----->(LAN)DG-HR3400----->PC

We would suggest you to do the following steps:-

Step1: Connect a computer to the LAN on the router.

Step2: Type 192.168.2.1 on the address bar of your web browser.
Press enter. Login with username admin and the password is 1234.

Step3: Go to Setup > Mode Settings> Select mode to bridge mode >
Apply changes

Step4: Click on Wireless settings >>>Basic settings.

Step6: Enter a new name in the SSID field. Change the channel number to 9.

Step7: Under Security Settings>>>Select WPA-PSK(TKIP) >>> Enter your password in the pre-shared key box >> Click on Apply.

Step8: Go to setup > Local Network > Change the IP to 192.168.1.254 >
Apply

Step9: Reboot the router and access the page now with 192.168.1.254

Step10: Go to setup > Local Network > In DHCP server settings
- Change the DHCP mode to None
- Apply changes

Step11: Connect the cable from LAN of first DG-HR3400 to the LAN1 of the
2nd DG-HR1400

Verify the connectivity.