

HOW TO CONFIGURE YOUR DG-HR3420 FOR INTERNET ACCESS

STEP 1: ACCESSING THE WEB CONFIGURATION PAGE INSIDE THE ROUTER

Open the configuration page of the router by typing http://192.168.1.1 in a web browser. We recommend this one time configuration to be done using Internet Explorer.

Enter the username as admin and password as 1234 and click on Login

C 192.168.1.1/login.htm		Q¢
	Router Login	
	User Name: admin Password: Login Reset	





FAQs

STEP 2: CONFIGURE THE ROUTER IN STATIC MODE

Click on Setup >WAN

Under WAN > Select WAN Mode as Static IP

Keep all the values provided by the ISP handy i.e. IP Address, Subnet Mask, Default gateway and DNS values.

← → C 🗋 193	2.168.1.1/index.	htm				7 🔶
	isc	DĽ		DG-HR342()	300Mbps Wireless 3G Broadband Router
Status	Wizard	Setup	Advanced	Service	Firewall	Maintenance
WAN > WAN		WAN Config This page is use PPPoE and PPPo	uration d to configure the para DA only is "Manual", the	meters for the WAN inte "Connect" and "Discon	rface of your Ethernet Mo nect" button will be enab	odem/Router. Note : When connect type of Iled.
> 3G		WAN Mode:	Sta	tic IP 🔻	MTH	1500
LAN						1500
Wireless		IP Protocol:	Ipv	4/lpv6 ▼	·	
		WAN IP Settin Local IP Addr NetMask:	igs:		Remote IP Address:	
		DNS Settings: Attain DNS DNS 1:	S Automatically	Set DNS Manually DNS 2:	DNS 3:	





Enter the IP address, NetMask, Remote IP (default gateway) in the respective fields.

Under DNS settings > Select set DNS Manuall

Enter DNS1, DNS2

Under MAC Clone > Select MAC From PC

Click on Apply Changes

• -> C 🗋 192.168.1.1/index.htm			۲ 🖒
WIREless	IP Protocol:	lpv4/lpv6 ▼	
	WAN IP Settings:		
	Local IP Address: NetMask:	192.168.44.15 Remote IP Address: 192.168.44.254 255.255.255.0	
	DNS Settings: Attain DNS Automatically DNS 1: 172.18.0.200	Set DNS Manually DNS 2: 8.8.8.8.8 DNS 3:	
	MAC Clone: Default MAC	(ex. 00E086710502) MAC from PC OMAC Manual	
	WAN Port Speed:	Auto Negotiation	
	IPv6 WAN Setting: 🛛 💝		
	Apply Changes Refresh		

Router will reboot once the configuration settings are saved.





STEP 3: CHECKING INTERNET ACCESS

Click Status > Device Info

If you are successfully connected to the internet, you will get IP address Under Ethernet WAN Interface > Inside the IP Address and Gateway sections and DNS servers under DNS status.

DIG	ISC	DĽ		DG-HR342	300Mbps Wireless 3G Broadband Router		
Status	Wizard	Setup	Advanced	Service	Firewall	Maintenance	
Device_info Device_info		Wireless Ro This page shows	uter Status the current status and	some basic settings	of the device.		
Statistics		Alias Name Uptime Date/Time Firmware Ver	Alias Name Uptime Date/Time Firmware Version		44		
		LAN Configu	ration	192.168.1.1			
		Subnet Mask IPV6 Address DHCP Server MAC Address	-	206.206.206.0 fe80::217:7off:fe60:2 Enable 00:17:7C:60:2F:48			
		DNS Status DNS Mode DNS Servers		Manual 172.18.0.200 192.168	8.221.1		
		IPv6 DNS Mo IPv6 DNS Ser	de rvers	Auto			
		Ethernet WA	.N Interfaces Droute Off	Protocol STATIC IP	IP Address 192.168.44.15	Gateway \$	itatus IIP

Now verify the internet access through DG-HR3420 router.

If you are able to go online, you have successfully configured the router for internet.

