

**Q : How to change the login password in DG-BG4300NU**

**A :** Please find the steps given below to change the login password:

Step1: Connect a PC wired to the router

Step2: Enter 192.168.1.1 on the web browser and login with username as admin and password admin

Step3: Click on Maintenance > Password

Step4: Select Admin account from User Account Table, the details will be populated in User account Configuration

Step5: Enter New Password and re-enter the same in Confirm password

Step6: Click on "Modify"

You will get logged out from the page. Now login with the new password.