



Quick Installation Guide

802.11ac 1200Mbps Dualband Wall Mount Wireless Repeater

DG-WR1200AC



ultra

1200 Mbps

Copyright

Copyright 2022 by DIGISOL SYSTEMS LTD. All rights reserved.
Company has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date.

Please check with your local distributors for the latest information.
No part of this document can be copied or reproduced in any form without written consent from the company.

Trademarks:

DIGISOL[®] is a trademark of DIGISOL SYSTEMS LTD. All other trademarks are the property of the respective manufacturers.

Wireless AP/ Extender Quick Installation Guide

Product introduction



This wireless range extender includes Wireless AP, Wireless repeater.

Interface / LED	Description
Power Connector (2 pin Plug)	Connect to 230v AC Power Socket
Reset / WPS button	Press for 10 seconds to factory reset the configuration Press for 2 seconds to start WPS connection
2.4GHz LED	ON : WiFi Radio Enabled for 2.4GHz Band
	OFF : Wifi Radio Disabled for 2.4GHz band
	Flashing : WPS connection initiated
5GHz LED	ON : WiFi Radio Enabled for 5GHz Band
	OFF : Wifi Radio Disabled for 5GHz band
Double WiFi/ Repeater LED	ON : WiFi Repeater connection success
	OFF : WiFi Repeater connection fail / Not configured
LAN 1 LED	ON : Connected a LAN Device
LAN 2 LED	ON : Connected a LAN Device
LAN 1 Port	For connecting Ethernet enabled Devices / PC Functions in AP and Repeater Mode
LAN 2 Port	For connecting Ethernet enabled Devices / PC Functions in AP Mode only


NOTE : You must reset DG-WR1200AC to factory default settings first (press reset button for 10seconds) , only incase if you have done some settings before.

Step by Step guide to connect and configure AP/Repeater using Windows System.


Connect to AP/Extender using Wireless :

Please make sure your computer has configure wireless adapter. Then please follow the below steps to connect to the AP/Repeater, wirelessly.

1. Click Start > Control Panel > Network and Sharing Center, click Change adapter settings, right-click Wireless Network Connection, select Connect/Disconnect.

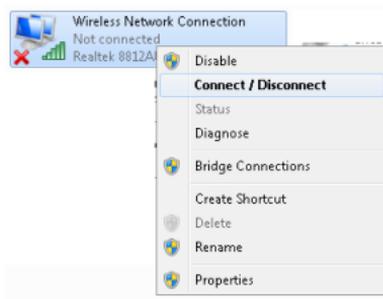

2. Select the SSID or Wireless name "DIGISOL Repeater 2.4GHz" or "DIGISOL Repeater 5GHz" then click Connect.

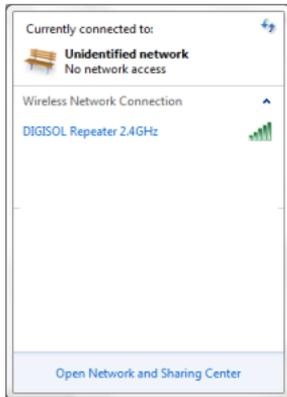


Extender mode : Configuration

Method-1 : Just Press the WPS button on the Main router or Root AP and immediately press the WPS button on the DIGISOL extender (DG-WR1200AC) for 2 to 3 seconds, then a wireless connection will be established automatically between both Main Router and Extender.




Note : The WPS connection will be invalid if it is already connected to any other router successfully, then you must reset it to the factory default setting first, then start the WPS connection again.

Method-2 : Connect the LAN Cable on LAN1 Port OR Connect to Wi-Fi SSID "DIGISOL Repeater 2.4GHz" OR "DIGISOL Repeater 5GHz", then open browser and type <http://192.168.2.1> (OR <http://digisolrepeater.com>), input username as "admin" and password "1234" to login.

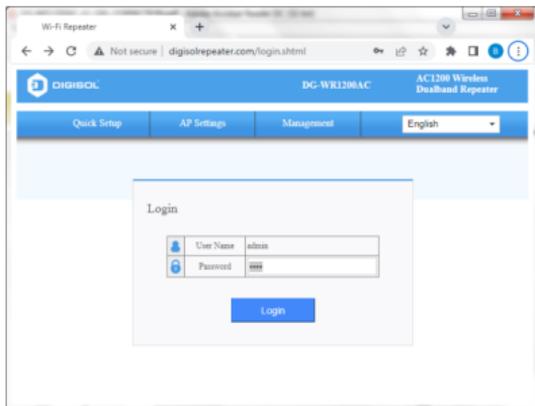

The Device will start the Wi-Fi Scan for Main/Root WIFI AP's/Routers nearby

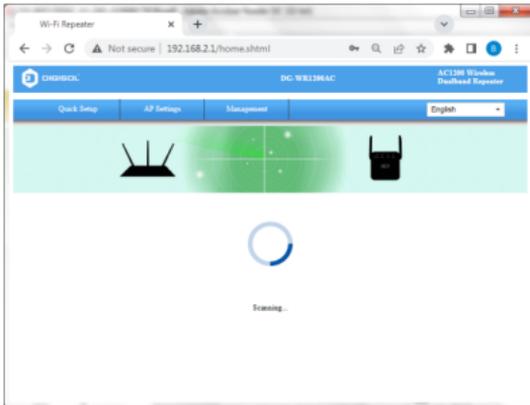

Now Select the SSID/WIFI name of Main/Root AP for which the WIFI Range is to be extended




Enter the Wireless Password/key of the Main/Root Wi-Fi AP/Router. Click Next

The screenshot shows a web browser window titled "Wi-Fi Repeater" with the URL "192.168.2.1/home.shtml". The page has a blue header with "ASUSTeK" on the left and "AC1300 Wireless Dualband Repeater" on the right. Below the header are navigation tabs: "Quick Setup", "AP Settings", "Management", and "English". The main content area features a green background with icons of a router and a phone. The text "Please enter the SSID and password of the host router" is centered. Below this text are three input fields: "Wireless Name" (containing "Repeater"), "Wireless Password" (empty), and "Share Password" (with an unchecked checkbox). At the bottom are "Back" and "Next" buttons.


Now here you can continue the same SSID or Modify Repeater SSID/password. Click next.

The screenshot shows the same web browser window, but now on the "Please enter repeater wireless password" step. The "Wireless Name" and "Wireless Password" fields both contain "Repeater SA". Below these fields is a note: "The default repeater name is 'XXXXXXXXXXXX' (change password)". There are three dropdown menus: "Auth Mode" (set to "WPA2PSK"), "Encryption Type" (set to "AES"), and "Wireless Password" (containing "*****"). The "Share Password" checkbox remains unchecked. "Back" and "Next" buttons are at the bottom.

Click "Start Connect"

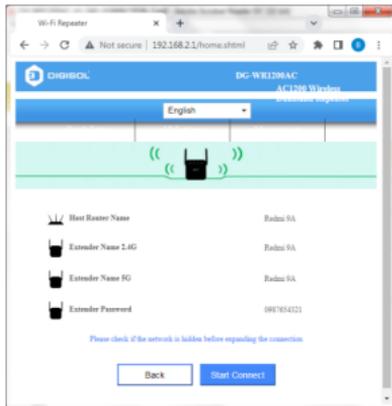

Please wait for a while until the Wi-Fi Repeater connects successfully with Main/Root AP.

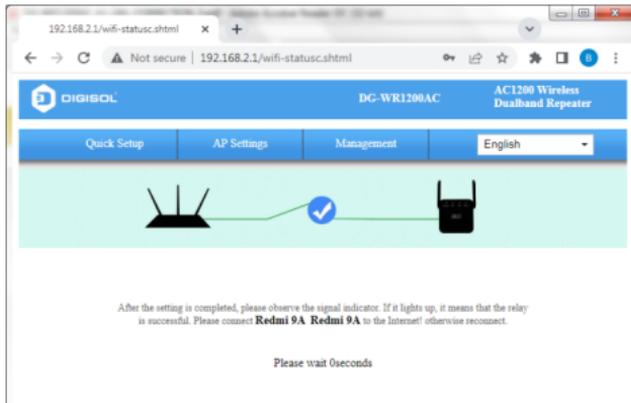

After the setting is completed, please observe the signal indicator LED on Repeater. If it lights up, it means that the relay is successful, otherwise reconnect.





WARRANTY

This Product is covered under DIGISOL Warranty program backed by DIGISOL Service Center. To avail this Warranty offer, customer needs to contact DIGISOL's Technical Assistance Center for the same. You may be asked to provide proof of purchase of product for warranty claim of defective product. Please refer website www.digisol.com for the detailed support terms & conditions and support process.

Warranty Policy

1. **Hardware Warranty :** Hardware warranty period shall be limited up to Three years. External Power Adapter shall carry One year warranty only against manufacturing defects. Any repair or replacement will be rendered by DIGISOL at its Service Center only.
2. **Software Warranty :** DIGISOL issues this Limited Software Warranty that the software portion of the product ("Software") will substantially confirm to DIGISOL's then current functional specifications for the software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of one year ("Software Warranty period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation.
3. **Governing Law:** This warranty shall be governed by Indian Laws.
4. **Warranty shall subject to the terms & conditions specified in the DIGISOL Product Warranty policy displayed on www.digisol.com**
5. **To avail and activate warranty for your product.**
Kindly register your product by calling us @1800 209 3444

DIGICARE

 helpdesk@digisol.com

 **1800 209 3444**





DIGISOL SYSTEMS LIMITED

L-7, Verna Industrial Estate,
Salcete, GOA - 403722

Digisol is a Subsidiary of Smartlink Holdings Limited

www.digisol.com

DIGICARE

 **1800 209 3444**

 helpdesk@digisol.com